



## Power Suite

Item Number Description

0619-296-01 RETAINER,MIRROR  
0619-385-01 MIRROR, RELAY PLANO HO  
0619-407-01 DISPLAY PIVOT  
0619-407-01 DISPLAY PIVOT  
0619-410-01 HANDLE TOP COVER.  
0619-411-01 HANDLE, FRONT COVER  
0619-668-01 BUMPER, FRONT DOOR  
0619-769-01 FIBER NUT PLATE (ON LENS CELL)  
0621-057-01 BUMPER SIDE PANEL  
0621-132-01 COVER, BLAST SHIELD ACCESS  
0621-734-01 SMA SLEEVE. PART OF TOOL 0622-921-01  
0622-418-01 FRU, AIR FILTER  
0622-440-01 2.5 GAL DISTILLED WATER 10liter.  
0623-493-01 MIRROR, OC, ND  
0623-494-01 MIRROR, FIRST RELAY,  
0623-495-01 PLANO RELAY , ND  
0623-497-01 MIRROR, 45 DEGREE FOLDING  
0623-500-01 ATTENUATOR SERVICE (AND SHUTTER OPTIC)  
0623-500-02 ATTENUATOR LOW ENERGY  
0623-501-01 BEAM COMBINER, OPTIC HO.ND  
0623-502-01 OPTIC BLASTSHIED HO/ND  
0624-015-01 BLAST SHIELD FRU, COMPLETE ASSY  
0625-352-01 FRU,SERVO OPTIC AND HOUSING MOTOR  
0625-962-01 PLUG FRU BRH INTERLOCK.  
0626-434-01 FRU,REMOTE CONTROL ASSY.  
0626-695-01 POWER SUPPLY CONTROLLER PCB  
0626-697-01 SIMMER/START PCBA TESTED  
0626-701-01 PCBA, IGBT,DRIVER TESTED  
0626-872-01 MIRROR, HR, REAR MIRROR  
0626-875-01 MIRROR HR, ND  
0626-879-01 XENON FLASHLAMP,  
0626-880-01 LASER ROD.HO 5"  
0626-881-01 ROD, ND: YAG,5"  
0626-987-01 PCBA, START INDICATOR  
0626-994-01 PYRO MIRROR IMAGING.  
0628-307-01 G-10 INSULATOR BASE (UNDER POD)  
0629-532-01 OPTICAL FIBER SET (CPU-HVPS)  
0629-599-01 BAG, ACCESSORY,VERSAPULSE  
0629-721-01 NUT, LOCKING, FOR ADJUSTMENT SCREWS  
0631-941-01 E-STOP SWITCH FRU

0632-444-01 TACH SPEED SENSOR PCB  
0632-815-01 BEZEL,DISPLAY  
0633-727-01 LVPS TO CPU.  
0635-023-01 ASSEMBLY, TOP COVER, LONG FRU OUTER  
0635-684-01 HEAT EXCHANGER WATER-TO AIR, ALUM (AUX COOLING.)  
0635-721-01 CONDUCTIVITY SENSOR FRU  
0635-739-01 LOWER MANIFOLD W/TEMPSENSOR #2  
0635-740-01 LOWER MANIFOLD W/TEMPSENSOR #1  
0636-016-01 FRU, DISPLAY PANEL, SELECT  
0636-039-01 PCBA, OPTICS BENCH, POWERSUITE  
0636-041-01 PCBA, SERVO, POWERSUITE  
0636-043-01 PCBA, ATTENUATOR, POWERSUITE  
0636-045-01 PCBA, CPU, POWERSUITE WITHOUT SOFTWARE.  
0636-049-01 PCBA, FAN SPEED, POWERSUITE  
0636-799-01 OPTIC WEDGE HO/ND  
0636-800-01 SPACER, PICK-OFF WEDGE  
0637-140-01 BRACKET, FILTER HOUSING.  
0637-153-01 MIRROR, RESONATOR OC HO  
0637-241-01 CABLE, PROXIMITY SENSOR  
0637-264-01 CPU CABLE SET.  
0637-265-01 CABLE, MAIN AC HVPS  
0637-367-01 METHOD, REAR PANEL, ASSEMBLY  
0637-463-01 CABLE, TEMP SENSE WATER FAN  
0637-475-01 CABLE, PUMP MOTOR, POWERSUITE  
0637-476-01 TEMP SENSOR WATER CPU.  
0637-705-01 METHOD, DIODE MIRROR ASSY  
0637-708-01 MANIFOLD, POD ALUMINUM.  
0637-894-01 TRANSFORMER ISOLATION 5KVA  
0637-986-01 METHOD, LASER POD, HO, POWERSUITE 80W OR 100W.  
0637-989-01 WEDGE.  
0638-054-01 FILTER CAP BOARD  
0638-062-01 LINE FILTER TO CIRCUIT BREAKER.  
0638-080-01 POWER SUPPLY, POWERSUITE 4 CHANNEL & SELECT II  
0638-115-01 BREAKER PANEL  
0638-135-01 METHOD, PROGRAM MAIN ROM, U63  
0638-135-01 METHOD, PROGRAM MAIN ROM, U63  
0638-295-01 LINE FILTER 32AMPS  
0638-392-01 METHOD, BUILD KEYSWITCH, PSUITE  
0638-429-01 GLASSES SAFETY.  
0638-491-01 LASER DIODE MODULE  
0638-541-01 METHOD, BRAKE PREP. SUB. ASSY  
0638-541-01 METHOD, BRAKE PREP. SUB. ASSY  
0638-615-01 METHOD, LASER POD, DUAL WAVELENGTH, POWERSUITE  
0638-615-01 METHOD, LASER POD, DUAL WAVELENGTH, POWERSUITE  
0638-632-01 POWER SUPPLY, 2 HEAD, POWERSUITE  
0638-633-01 POWER SUPPLY, 3 HEAD, POWERSUITE

0638-634-01 POWER SUPPLY,DUAL 4 CHANNEL  
0638-709-01 FOOTSWITCH DUAL  
0638-725-01 HEAT EXCHANGER WATER-TO-WATER FRU  
0638-726-01 PUMP MOTOR/HEAD/MANIFOLD FRU.  
0638-728-01 KEYSWITCH FRU  
0638-729-01 PARTICLE FILTER ASSY FRU (W/FLOWSWITCH&FILTER  
0638-730-01 FRU,FLOW SWITCH,POWERSUITE W/FITTING  
0638-731-01 FAN/MOTOR ASSY FRU  
0638-732-01 FRU,AIR SENSOR FAN ASSY POWERSUITE TEMP  
0638-733-01 FRU,AC CONTROL PCBA,PWRSUITE  
0638-734-01 FRONT DOOR FRU  
0638-735-01 SIDE PANEL RIGHT  
0638-736-01 SIDE PANEL LEFT W/AUX (KEY SIDE)  
0638-736-02 SIDE PANEL LEFT NO AUX COOLING (KEY SIDE)  
0638-737-01 FRU,MOTOR SERVO,W/CONNECTOR.  
0638-739-01 FRU,CONNECTOR REAR PANEL ASSEMBLY  
0638-740-01 FRU,BLAST SWITCH ASSY  
0638-741-01 FRU,CPU WITH EEPROM,100W  
0638-741-02 FRU,CPU WITH EEPROM,80W  
0638-741-03 FRU,CPU WITH EEPROM,60W  
0638-741-04 FRU,CPU WITH EEPROM,45W  
0638-741-05 FRU,CPU WITH EEPROM,30W  
0638-741-06 FRU,CPU WITH EEPROM,80WJAPAN  
0638-741-07 FRU,CPU WITH EEPROM,30WJAPAN  
0638-741-08 FRU,CPU WITH EEPROM,80/100W  
0638-741-09 FRU,CPU WITH EEPROM,60/100W  
0638-741-10 FRU,CPU WITH EEPROM,60/100W JA  
0638-741-11 FRU,CPU WITH EEPROM,20/60W  
0638-763-01 CARTRIDGE ,WATER DI FRU W/FITTINGS  
0638-765-01 FRU,CCW ROTORY SOLENOID LE ATTENUATOR  
0638-766-01 FRU,CABLE GRAPHICS TERMINAL  
0638-883-01 CAVITY ND FRU  
0638-886-01 LENS CELL DUAL 1  
0638-911-01 FRU,HO LENS CELL CAST HEAD  
0639-679-02 FOOTSWITCH ,POWERSUITE+ SOS+ SELECT II+ SELECT I.  
SINGLE  
0639-855-01 CAVITY FRU, HO , (COMPLETE W/ROD & LAMP)  
0640-491-01 ADJUSTMENT SCREW LONG  
0640-492-01 ADJUSTMENT SCREW , SHORT  
0640-492-01 ADJUSTMENT SCREW , SHORT  
1403-0041 SLIDE HVPS  
1403-0041 SLIDE HVPS  
1406-0127 LATCH PINS FRAME  
1406-0146 LATCH FRONT DOOR (KIT)  
1406-0147 HINGE DOOR  
1407-0163 3.5" CASTOR FRONT.

1407-0164 WHEEL REAR  
2104-1118 PLUG FOOTSWITCH LEMO (W/PINS)  
2206-0112 VALVE DRAIN.  
2206-0117 VALVE , CHECK (ON LOWER TANK)  
2504-0012 SNAP RING BLASTSHIELD  
2508-0011 WAVE WASHER  
2508-0011 WAVE WASHER  
2516-0346 HOSE BARB BEAM DUMP 90  
2518-0629 HOSE BARB BEAM DUMP STRAIGHT.  
2519-0207 FITTING , QUICK , MALE, RIGHT ANGLE.  
2519-0213 FITTING QUICK MALE STRAIGHT  
2519-0297 QUICK CONNECT MALE 1/2"  
2519-0298 DRAIN FITTING FEMALE  
2521-0032 HOSE,BRAIDED 0.5" ID  
2521-0032 HOSE,BRAIDED 0.5" ID  
2521-0036 TUBING TYGON  
2521-0036 TUBING TYGON  
2521-0167 TUBE CLEAR 0.25" ID  
2521-0167 TUBE CLEAR 0.25" ID  
2521-0216 HOSE,BRAIDED 0.25" ID  
2521-0216 HOSE,BRAIDED 0.25" ID  
2521-0217 TUBE CLEAR 0.5" ID  
2521-0217 TUBE CLEAR 0.5" ID  
2601-0145 CAPACITOR MOTOR FAN.  
2603-0147 PARTICLE FILTER 0.2 MICRON POWERSUITE, SELECT I & IISOS  
2801-0192 SCREW FILTER HOUSING  
3207-0037 FOAM TAPE.  
3207-0037 FOAM TAPE.  
3501-0142 PUMP HEAD CLAMP V-BAND.  
3501-0143 PUMP MOTOR  
4001-0253 LOW VOLTAGE POWER SUPPLY  
4501-0536 CONTACTOR MAIN  
4501-0537 CONTACTOR AUX N.C  
4801-0424 IGBT,200A,1200V  
4802-0728 BRIDGE RECTIFIER  
5102-0123 BUTTON RED EMERGENCY STOP.  
5102-0128 SWITCH EXTERNAL FIBER BLASTSHIELD SENSE  
5107-0190 KEY #311  
5108-0147 CIRCUIT BREAKER 32A/250V  
5109-0014 SURGE PROTECTOR (ON AC CONTROL PCB)  
5110-0248 FUSE 250MA  
5110-0251 FUSE,1A SB 5X20MM  
5110-0254 FUSE 4A/250V, TIME LAG.  
5110-0263 FUSE, 50 mA  
5110-0282 FUSE,SLO BLO,5X20MM,250V 1/2A  
5110-0302 FUSE B+

5110-0319 FUSE,2A,250V,5x20mm,TIME LAG

5110-0326 FUSE, 0.1A/440V

5112-0030 PEM,VOLTAGE SLCTR,100,115,230V FOR MORCELLATOR ONLY.

6005-0166 POWER CORD 3X10AWG

6005-0166 POWER CORD 3X10AWG

6101-0050 FLTR,FUSEDRAWER,2POLES,BLK FOR VERSACUT ONLY

HA0000069 COUPLING BODIE FLOW 1/4"STRAIGHT