



Trutech Laser Corporation

190 Cutler Suite A | Salt Lake City, UT 84054 | info@trutechlaser.com | 801.936.0697

Select II

PRINTED CIRCUIT BOARDS

PCB, CPU Controller (Universal)	0626-766-01
PCB, Dual Solenoid	0629-234-01
PCB, Controller, Fanspeed	0632-427-01
PCB, TACH, FAN	0632-444-01
PCB, Lamp Start Indicator	0626-987-01
PCB, Servo Amplifier	0619-280-01
PCB, Shutter	0627-520-01
PCB, Single Solenoid	0629-232-01
Rear Panel Connector Assembly	0638-739-01

LASER/OPTICS

Blastshield FRU, Ho/Nd	0624-015-01
Cavity FRU, Ho, 5"	0639-855-01
Cavity FRU, Nd, 5"	0638-883-01
Cavity, Rodless (w/lamp)	0626-933-01
Flashlamp, 5"	0626-879-01
Laser, Diode, Aiming, 650nm	0629-356-01
Lens Cell, Ho, Cast Head	0638-911-01
Lens Cell, Ho/Nd, Select II	0624-016-01
Optic, 1st RELAY, Ho/Nd	0623-494-01
Optic, Wedge, Ho/Nd	0636-799-01
Spacer, (for wedge optic)	0636-800-01
Optic, Plano, Ho	0619-385-01
Optic, Plano, Nd	0623-495-01
Optic, 45° Folding, Ho/Nd	0623-497-01
Optic, Blastshield, Ho/Nd	0623-502-01
Optic, Combiner, Ho/Nd	0623-501-01
Optic, HR, Ho	0626-872-01
Optic, HR, Nd	0626-875-01
Optic, L.E. Attenuator, Ho/Nd	0623-500-02
Optic, OC, Ho	0626-873-01
Optic, OC, Nd	0623-493-01
Optic, Pyro Image, Ho/Nd	0626-994-01
Optic, Service Attenuator, Ho/Nd	0623-500-01
Optic, Servo, Mounted, Ho/Nd	0625-352-01
Rod, Ho, 5"	0626-880-01
Rod, Nd, 5"	0626-881-01
Snap Ring, Blastshield	2504-0012
Spring, Mount, Optic	0622-476-01
Washer, Wave, Blastshield	2805-0011

COOLING SYSTEM

Cartridge, Water, DI, FRU (w/fittings)	0638-763-01
Cartridge, Water, DI (w/o fittings)	0613-783-01
Filter, Air	0622-418-01
Filter, Particle, Water, 0.2um	2603-0147
Fitting, Quick, Female	2519-0209
Fitting, Quick, Male, Straight	2519-0213
Fitting, Quick, Male, Right Angle	2519-0207
Drain, Manifold	0623-784-01
Drain, Valve	2206-0112
Fan, FRU	0621-588-01
Filter, Air	0622-418-01
Heat Exchanger	0619-397-01
Housing, Water Particle Filter, 1/2NPT	2603-0136
bracket, filter housing	0637-140-01
screw, filter housing	2801-0192
Motor, Pump, Water	3501-0143
Motor/Pump/Manifold, FRU	0622-851-01
O-Ring, Cavity	2502-1137
O-Ring, Lamp	2503-2126
O-Ring, Pod Vent Screw	2501-0050
O-Ring, Rod, Silicone (Red)	2503-2136
Pump Head	3501-0141
Sensor FRU, Air Temp, Fan	0622-540-01
Sensor FRU, Water Temp, Fan	0622-539-01
Sensor, Conductivity, FRU	0635-721-01
Switch FRU, Water Flow	0624-631-01
Tank, Water, Lower	0619-443-01
Tank, Water, Upper	0621-176-01
Thread Sealant, Teflon Paste	1605-0313
Water, DI, 2.5 gal. (10 liter)	0622-440-01

ELECTRICAL COMPONENTS

Breaker, Circuit, 30A, 250V	5108-0120
Button, Red, Emergnecy Stop	5102-0123
Capacitor, Motor, Fan	2601-0145
Contactora, Main	4501-0545
Contactora, Aux, N.O.	4501-0546
Contactora, Aux, N.C.	4501-0537
Contactora Mount Rail	0614-832-05
Cord, Power, 8/3, 26'	6005-0098
Fuse Block	5111-0124
Fuse, 0.5A, PICO, Slo-Blow	5110-0345
Fuse, T10A, 250V, 5 X 20mm	5110-0281
Fuse, T16A, 250V, 5 X 20 mm	5110-0294
Fuse, T4A, 250V, 5 X 20mm	5110-0254
Fuse,6.3A SLO BLOW	5110-0184
Plug FRU, BRH	0625-962-01
Relay, 12VAC, K1, Turn-on	4501-0460
Relay, 24VAC, K2, H2O Flow	4501-0461
Solenoid, Rotary, 24 VDC	2204-0004
Switch, Emergency Stop (not wired)	5102-0114
Switch, FRU, External Fiber Sense	0628-847-01
Switch, Key, 3 Position (not wired, w/keys)	5107-0188
Key Switch Bushing (for 5107-0188 switch)	0633-773-01
Transformer, T1	0619-396-01

SOFTWARE

Software, FRU	0629-141-01
Configuration PAL (U14), 4J/30W	0629-201-01
Configuration PAL (U14), 4J/45W	0629-203-01
Configuration PAL (U14), 4J/60W	0629-205-01
Configuration PAL (U14), 4J/80W	0629-144-01
Configuration PAL (U14), 4J/20/60W	0629-207-01
Configuration PAL (U14), 4J/60/100W	0629-146-01
Configuration PAL (U14), 4J/80/100W	0629-145-01
Configuration PAL (U14), 2.8J/30W (Jpn)	0636-529-01
Configuration PAL (U14), 2.8J/80/100W (Jpn)	0636-530-01

FRAME/CHASSIS

Bumper, Door, Front	0619-668-01
Bumper, Panel, Side	0621-057-01
Castor, Front, 2.5", Standard	1407-0161
Castor, Front, 3.5", Mobile	1407-0163
Cover, Blastshield	0621-132-01
Cover, FRU, Top, Outer	0635-023-01
Cover, Rear, Display	0619-408-01
Door, Hinge	1406-0147
Frontdoor, Ho/Nd, FRU	0632-089-01
Handle, Door, Front	0619-411-01
Handle, Top cover	0619-410-01
Hinge, Door	1406-0147
Panel FRU, Sides, Left/Right	0628-593-01
Wheel, Rear, Mobile	1407-0164
Wheel, Rear, Standard	1407-0150

SUB-ASSEMBLIES/MISC

Bezel, Front, Display	0619-409-01
Display FRU, Color	0636-016-01
Cable, Display, LCD (connectorized)	0636-479-01
Footswitch FRU, Dual	0638-709-01
Footswitch FRU, Single	0639-679-02
HVPS, 4 Channel, Dual	0638-634-01
HVPS, 3 Channel, Ho, FRU	0638-633-01
HVPS, 4 Channel, Ho, FRU	0638-080-01
HVPS, 2 Chanel, Ho, FRU	0638-632-01
Key, Laser, 311	5107-0146
Key, Laser, A126	5107-0163
Motor, Servo/Encoder	0619-451-01
Optical Fiber Set	0632-528-01
Remote Control FRU	0626-434-01
Supply, LVPS, +5/±15/+24 VDC	4001-0222